Pablo[®]

SOLIS

ASSEMBLY & INSTALLATION INSTRUCTIONS

TABLE OF CONTENTS

pg.	2-5	• • • • • • • • • • • • • • • • • • • •	SOLIS.
pg.	6-9	SOLIS CHANI	DELIER

Pablo[®]

SOLIS

ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124

PABLODESIGNS.COM



Pablo[®]

SOLIS

- 1. ATTACH ARM ASSEMBLY TO WALL
- 2. SLIDE COVER ONTO ARM
- 3. SLIP CORD INTO ARM SLOT FROM BELOW
- 4. TIGHTEN CORD CLAMP KNOB
- 5. ROUTE CORD AND DIMMER THROUGH SOLIS (IMPORTANT: USE THE CORD GUIDE TO KEEP CORD AWAY FROM BULB)

BULB TYPE

75W PAR 30 120V NARROW SPOT


LENGTH OF CORD SUPPLIED

13' (396cm) FROM LAMP TO DIMMER (FIELD CUTTABLE FOR PENDANT), 6' (183cm) FROM DIMMER TO PLUG.





CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

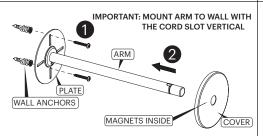

NOTE: WALL ANCHORS ARE SUPPLIED WITH SOLIS. USE ONLY IF APPROPRIATE FOR YOUR WALL TYPE.

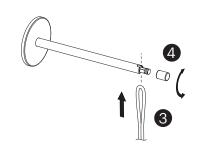

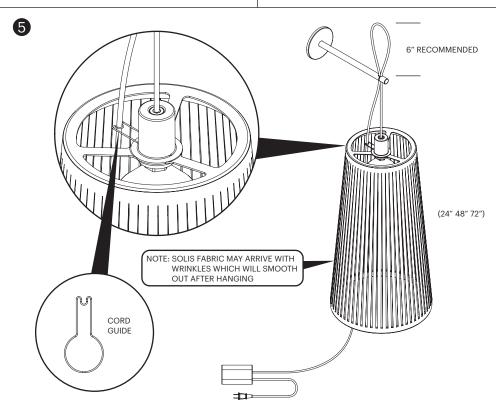


Pablo[°]


SOLIS

TO CONVERT FROM WALL MOUNT TO CEILING MOUNT:

- 1. REMOVE ARM FROM PLATE
- 2. ATTACH CEILING ADAPTOR TO PLATE
- 3. ROUTE CORD THROUGH COVER AND PLATE AND THEN SET THE CORD STRAIN RELIEF AT THE DESIRED HEIGHT
- 4. CUT CORD AND CONNECT TO BUILDING WIRING
- 5. ATTACH MOUNTING PLATE TO JUNCTION BOX
- 6. SLIDE COVER UP TO CEILING

NOTE: BEFORE CUTTING, WRAP CORD WITH ELECTRICAL TAPE TO PREVENT THE FABRIC SLEEVE FROM FRAYING

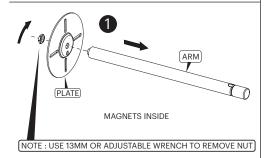

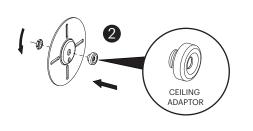

IMPORTANT: WE RECOMMEND CEILING MOUNTING OPTION BE INSTALLED BY AN ELECTRICIAN

